ASSEMBLY INSTRUCTION FOR ACME FURNITURE **MODEL# 91618 TV STAND**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact you local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) nee ded.


*** Do not fully tighten screws until fully assemble ***							
COMPONENT PARTS							
DECERPTION	PAI	RT NAME	Q'TY(PCS)	DECERPTION	PART NAME	Q'TY(PCS)	
1	TOP		1	8	MIDDLE FIX SHELVES	1	
2	LSF SIDE PANE	EL	1	9	SIDE ADJUSTABLE SHELVES	4	
3	RSF SIDE PANE		1	10)	MIDDLE BACK PANEL 1	1	
4	LSF INTERIOR P		1	(1)	MIDDLE BACK PANEL 2	1	
5	RSF INTERIOR F	PARTITIONS	1	(12)	SIDE BACK PANEL	2	
6	BOTTOM SHE	ELF	1	13)	LEFT DOOR	1	
7	FRONT RAIL		1	(14)	RIGHT DOOR	1	
HARDWARE REQUIRED:				(15)	MIDDLE ADJUSTABLE SHELVES	1	
A	® BOLT Ø1/4*1" - 21PCS				*		
(B) (C)	9)1111						
\sim	0						
D		DOWEL Ø8*30MM - 4PCS ALLEN KEY - 1PC					
E							
F		SHELF PINS - 20PCS					
G		METAL BRACKETS - 2PCS					
\bigoplus		PLASTIC FASTEN		CS			
	0	SCREW 6*3/4"L- 16PCS					
(L) (K) (L)		SCREW 7*5/8"L- 2PCS				7	
r)		PULLEY - 4PCS DOOR KNOBS - 2PCS					
M	Opposite	BOLT Ø 5/32"*1"L- 4PCS					

Attention:


^{***} Mattreses not included.

^{***} Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to odering replacements.

How to Assemble:

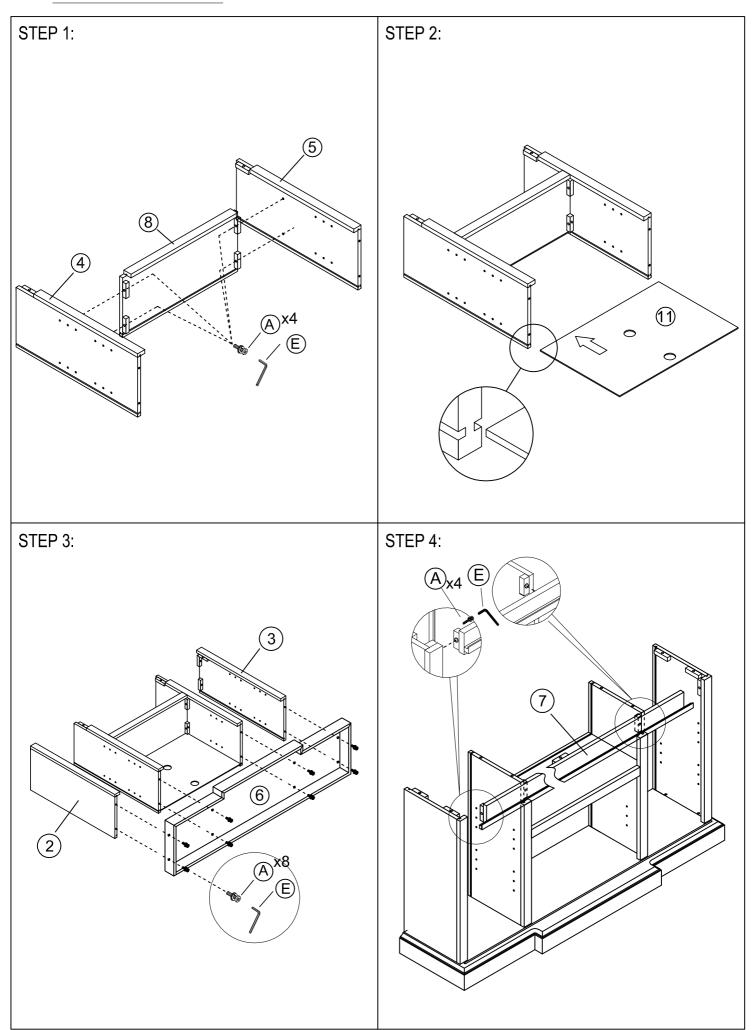

How to Assemble:

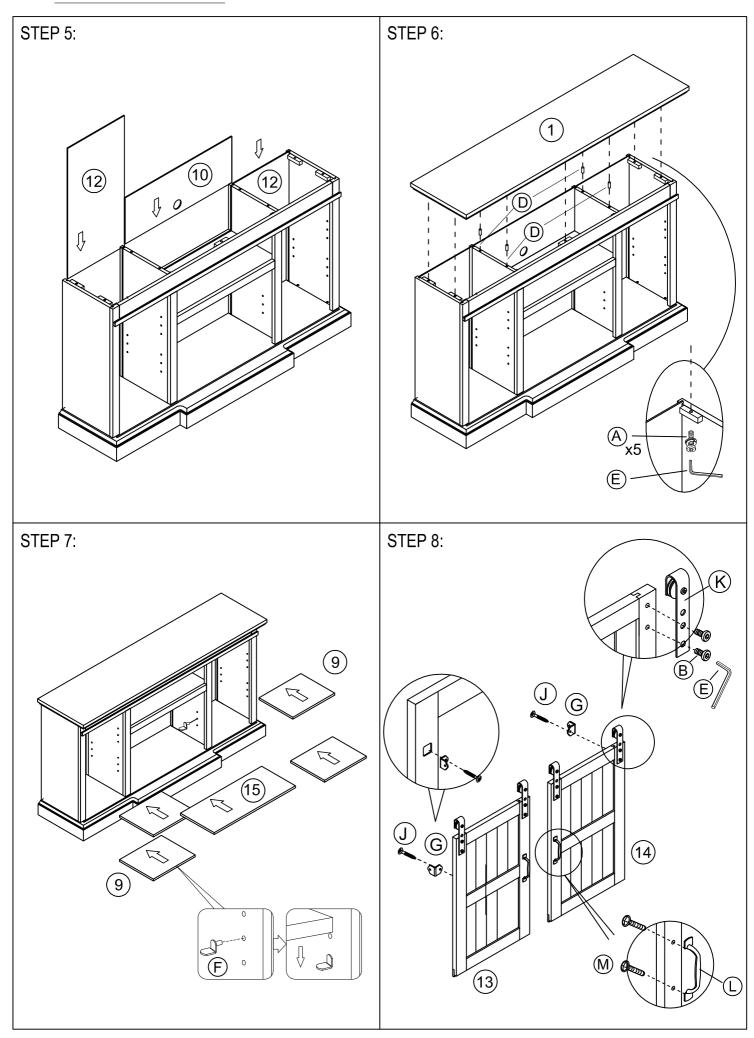

How to Assemble:

