ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#AC00960/AC00961

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

Do not fully tighten screws until fully assembled


	COMPONENT PARTS			
DESCRIPTION	PART NAME		Q'TY (PCS)	
A	DRAWER BACK BOARD		6	
В	DRAWER RIGHT BOARD	* * * *	6	
C	DRAWER LEFT BOARD	* * *	6	
D	DRAWER BOTTOM BOARD		6	
E	DRAWER FRONT BOARD	• • • • • •	6	
F	FRONT BOARD	• • • •	6	
G	КNOB		6	
H	TOP BOARD		1	

PAGE 1/10

	RIGHT BOARD	1
J	LEFT BOARD	1
K	MIDDLE BOARD	1
L	BACK BOARD	2
M	BOTTOM BOARD	1
N	LEG	5
0	ROUND PEDESTAL	2

HARDWARE REQUIRED

1		SCREW	8 x 1-1/4"	50	PCS
2		SCREW	8 x 1-3/4"	18	PCS
3		BOLT	1/4 x 1"	12	PCS
4		CAM BOLT	6 x 38mm	6	PCS
5		WOOD DOWEL	8 x 30mm	12	PCS
6	A A A A A A A A A A A A A A A A A A A	CAM LOCK	15mm	6	PCS
Ø		DOUBLE-HEADED BOLT	1/4" x 1-1/4"	5	PCS
					PAGE 2/10

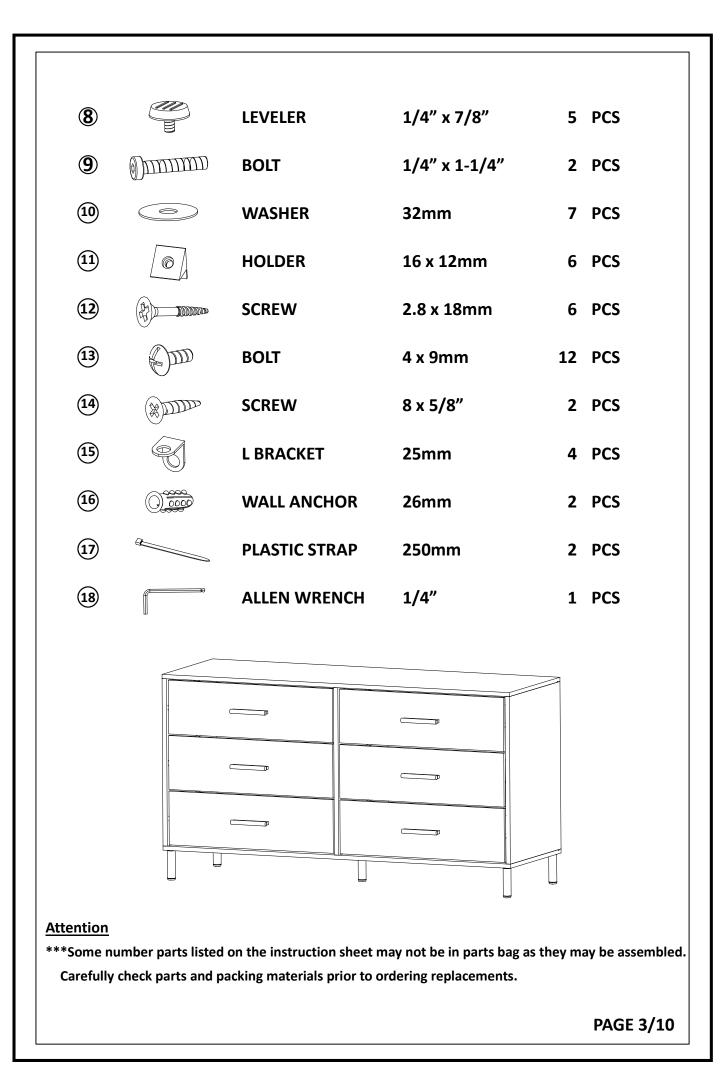

How to assemble:

