ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL#50485


Thank you for purchasing the quality product.Be sure to check all packing material carefull for small parts which may have come loose inside the carton during shipment.Seperate,identify and count all parts and metal hardware.Compare with all parts list to be sure all parts are present.If any part(s) are missing or damaged,please contact your local furniture dealer.For efficient and speedy service,please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

	Parts Desc.	Qty.	С	Metal Leg	8pcs	F Pillow 2pcs
Α	Sofa	1pc	D	Metal Center Leg	2pcs	
В	Chaise	1pc	Е	Arm Panel	1pair	

HARDWARE REQUIRED

1		Hex Wrench	1 PC	6	0	M6 Flat Washer	20 PCS
2	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Spanner	1 PC	•	0	M8 Spring Washer	6 PCS
3		M6 JCBC Bolt	20 PCS	8	0	M6 Spring Washer	20 PCS
4		M8 Stud Bolt	6 PCS	9		M8 Hex Nut	6 PCS
5	0	M8 Flat Washer	6 PCS				

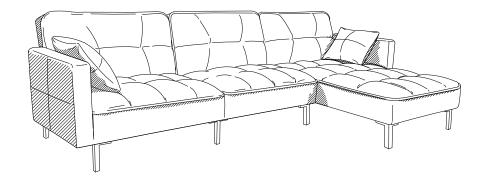

Attention

***Some number parts listed on the Instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:

