

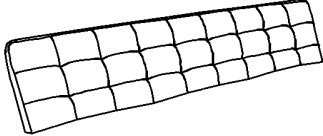
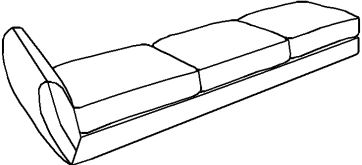
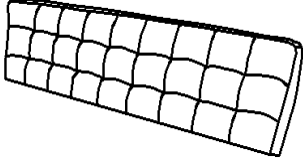
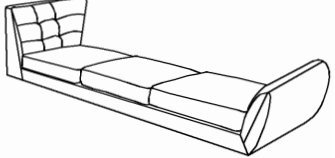


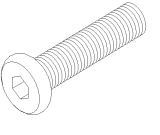



ASSEMBLY INSTRUCTON FOR ACME FURNITURE

MODEL#52765/52766(#5276)

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any parts(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled***

COMPONENT LIST

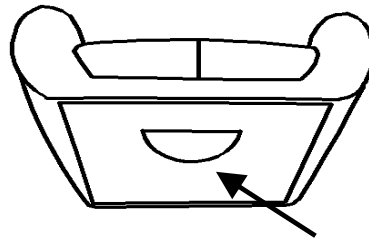
NO.	DRAWING	QTY	DESCRIPTION
A		1	LAF SOFA BACK REST
B		1	LAF SOFA SEAT
C		1	LOVESEAT W/WEDGE BACK REST
D		1	LOVESEAT W/WEDGE SEAT
E		6	WOOD LEG
F		4	PLASTIC LEG
1		6 PCS	
2		6 PCS	
3		6 PCS	
4		1 PC	

Attention:

***Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

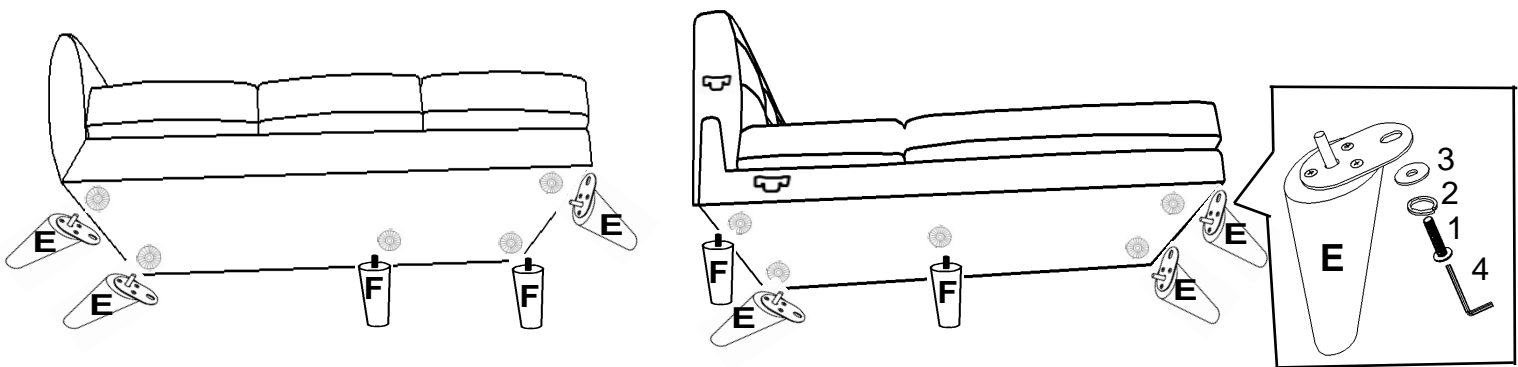
How to assemble:

Step 1. Take out the leg from the bottom of the Sofa and Loveseat with wedge.

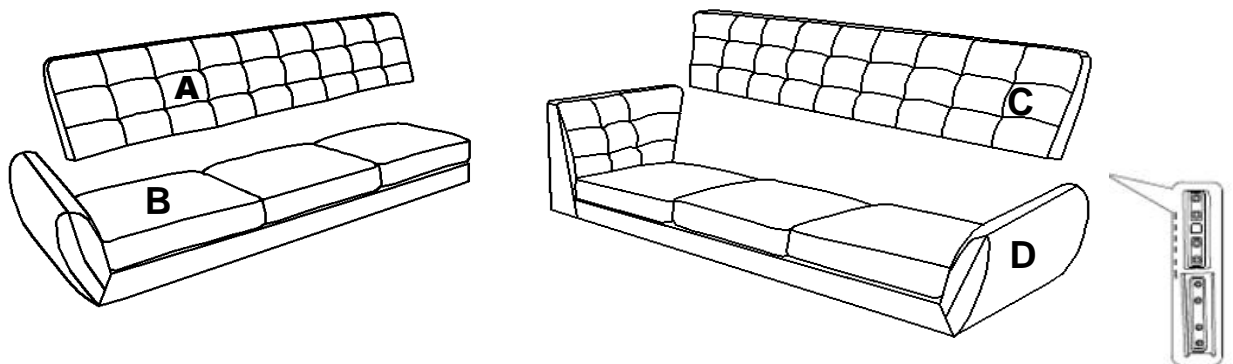


LEG INSIDE

Step 2. Attach legs onto the position at the bottom of the sofa/loveseat as shown in drawing, rotate the legs in order to tighten it to the proper position.



Step 3. Align female brackets at the back to the male brackets at the seat, insert the back rest to the seat and push it to the end, make sure the brackets is secured in position.



Step 4. Completed

