


ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL# 53345SOF, 53346CHA

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.











***** Do not fully tighten screws until fully assembled *****

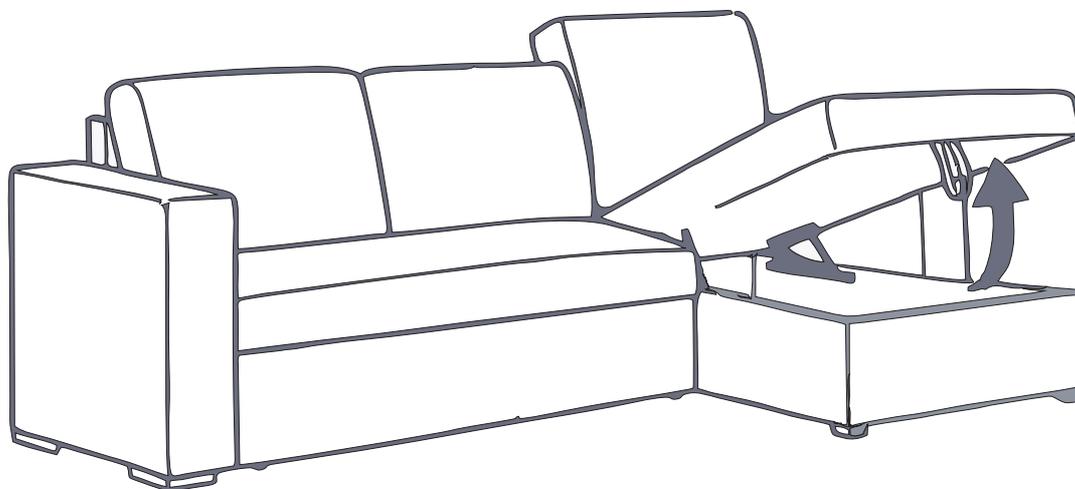

STORAGE

Access storage compartment by simply lifting seat cushion as shown.
Keep closed at all times.

Parts List

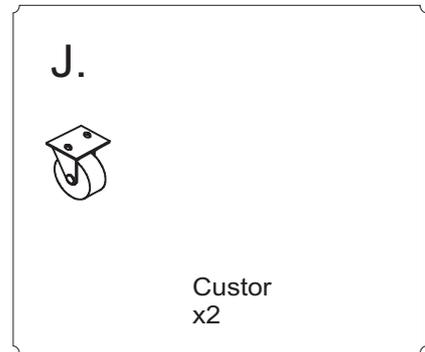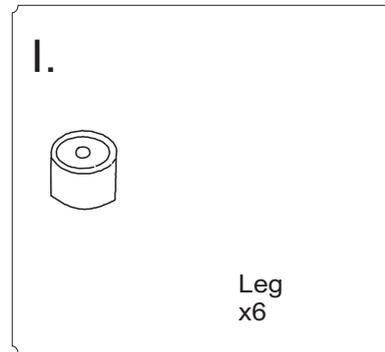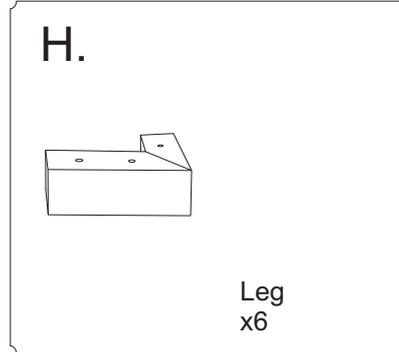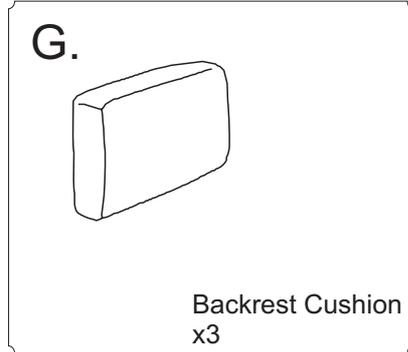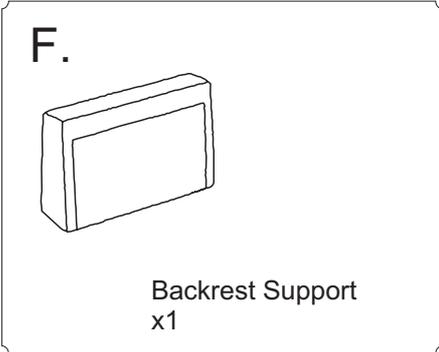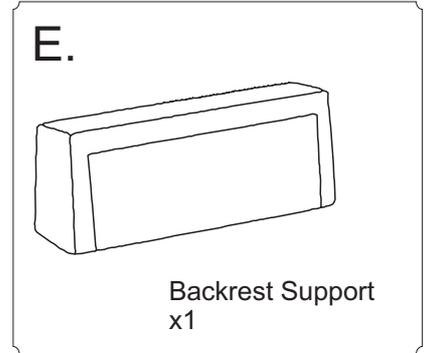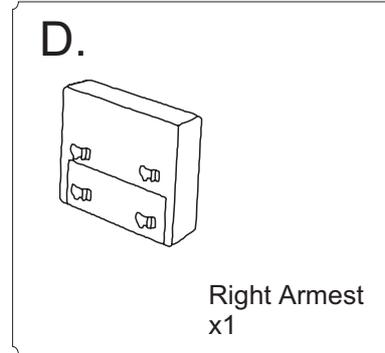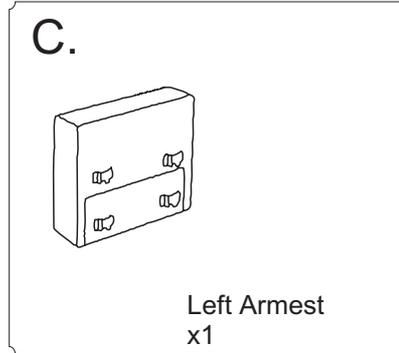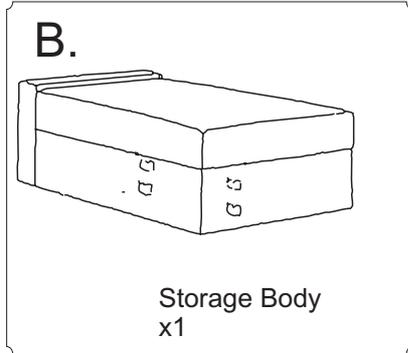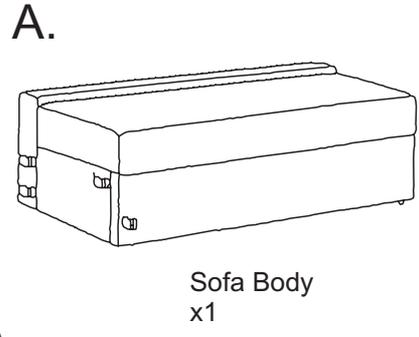

Hardware List



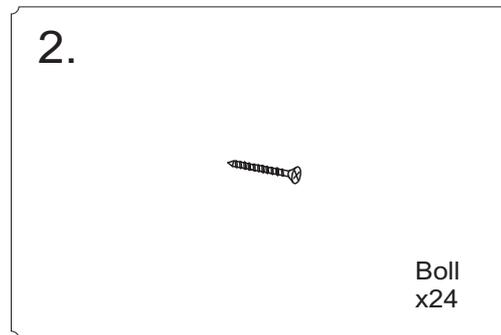


Figure 1

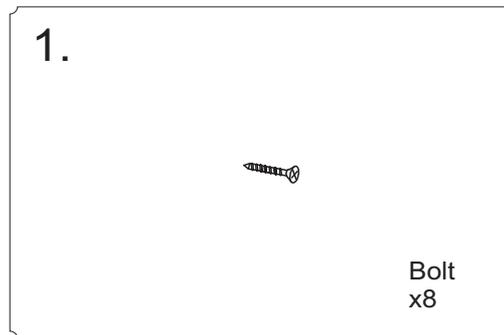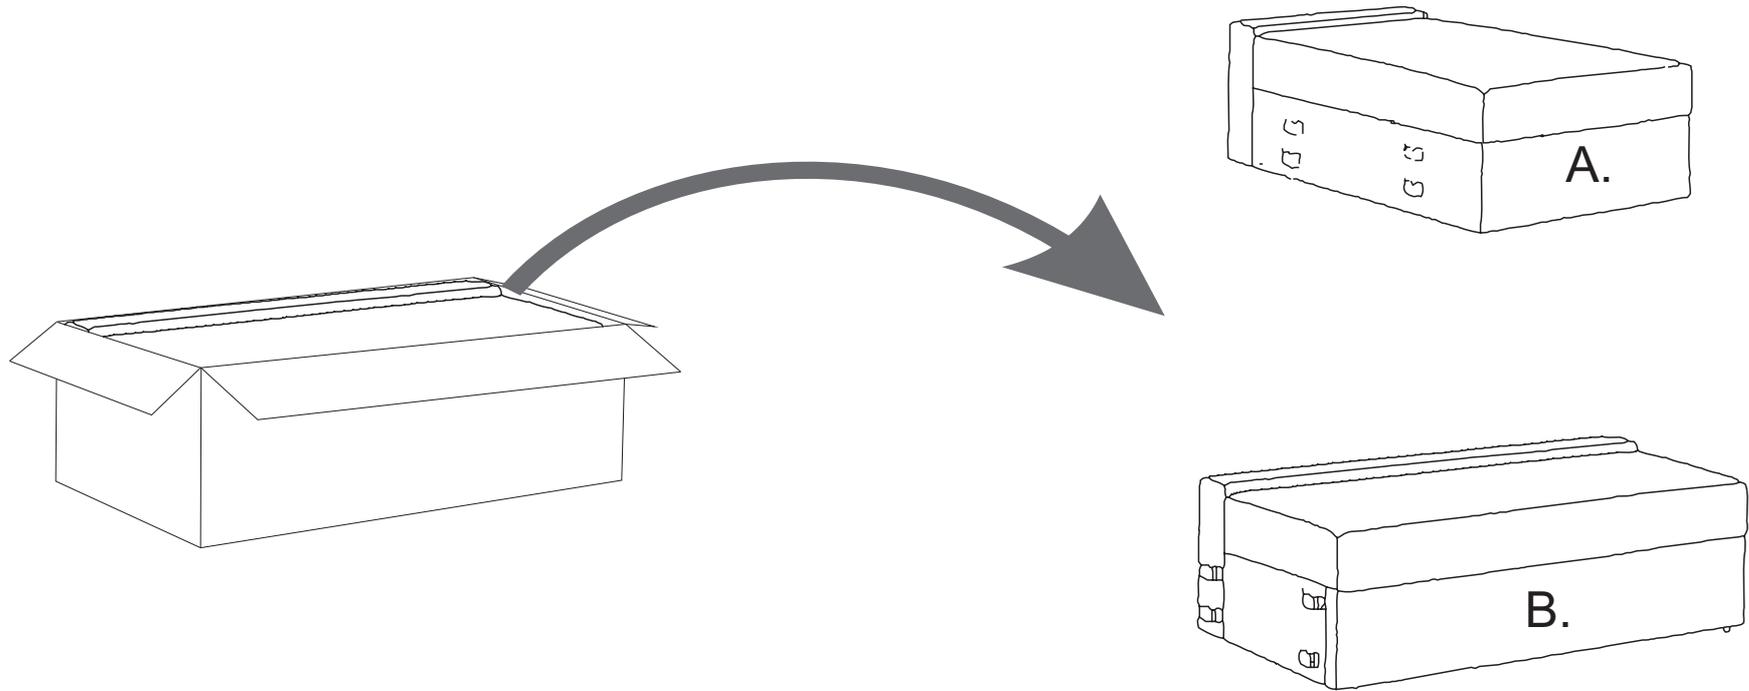

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery

1. Carefully place sofa body unit on a clean flat surface.

Figure 2




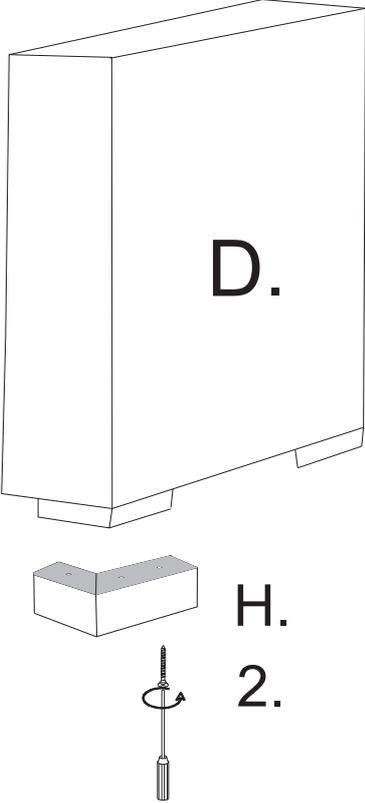


Figure 3

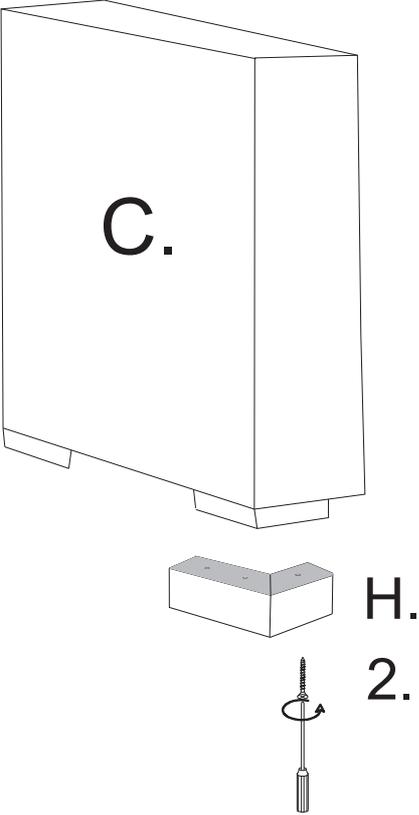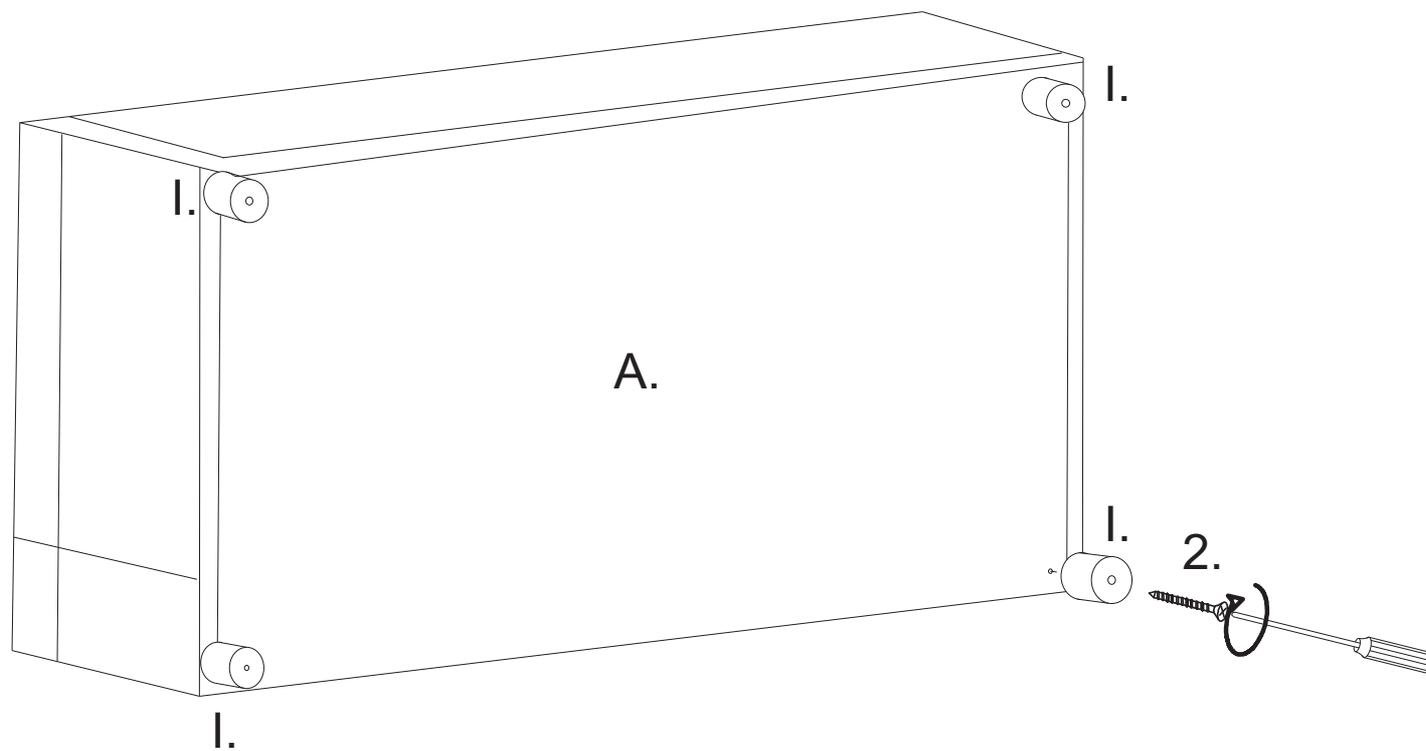

Sofa Body Bottom

Figure 4

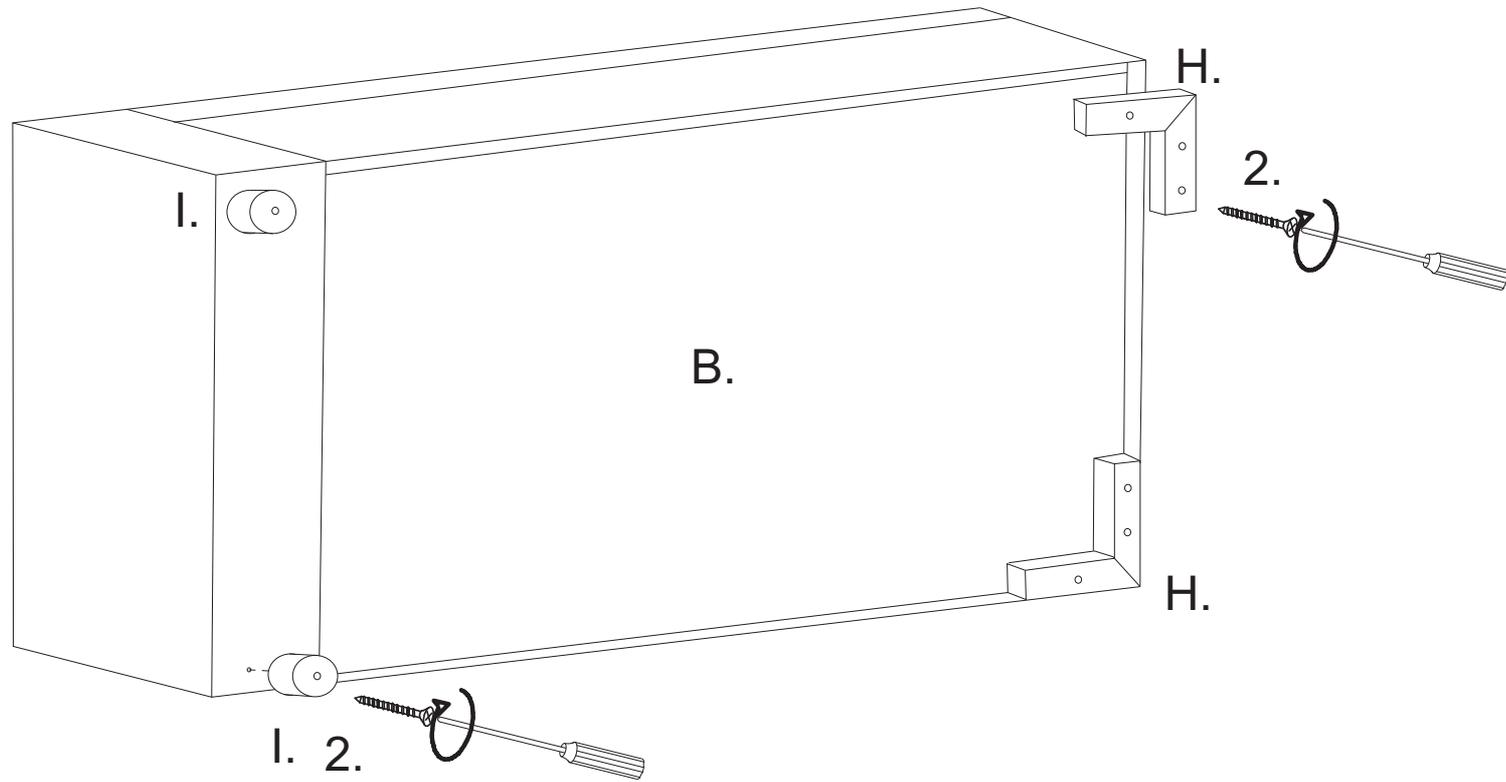

Storage Body Bottom

Figure 5

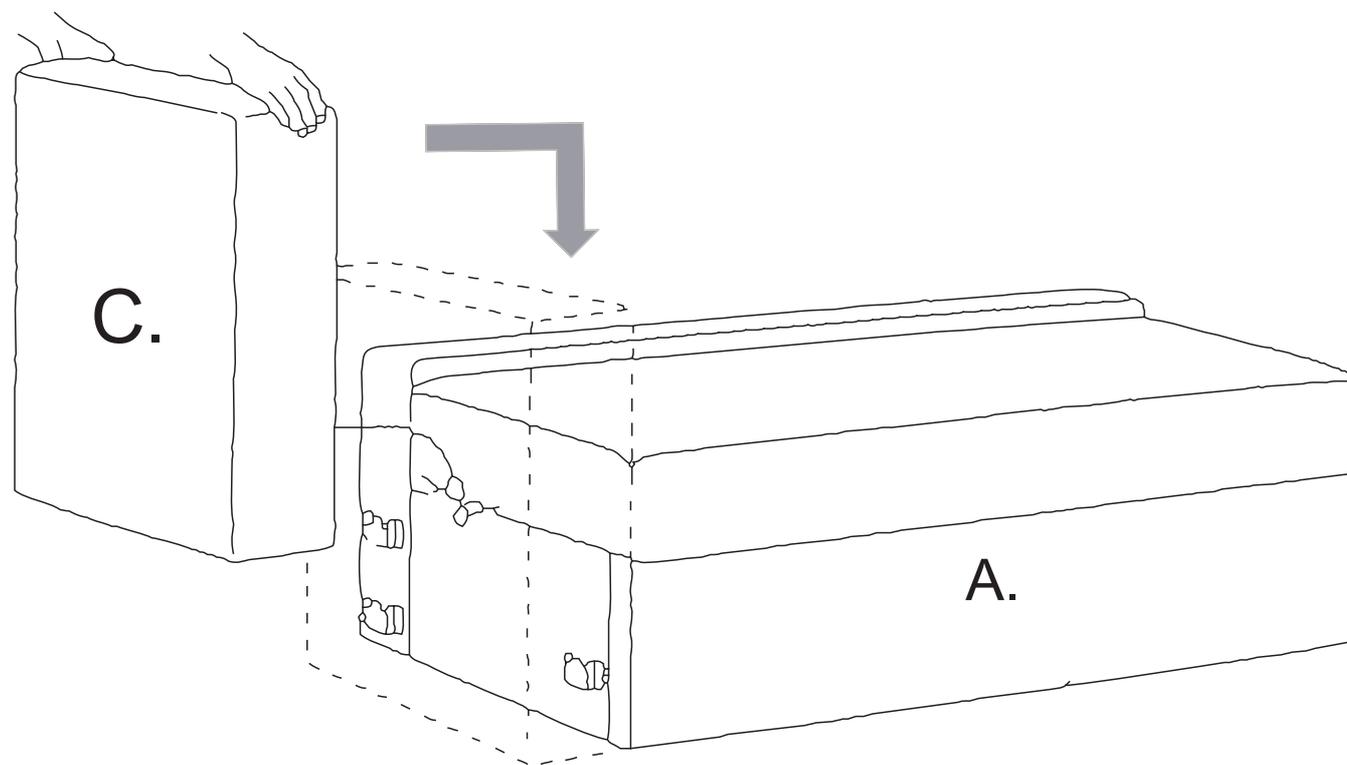


Figure 6

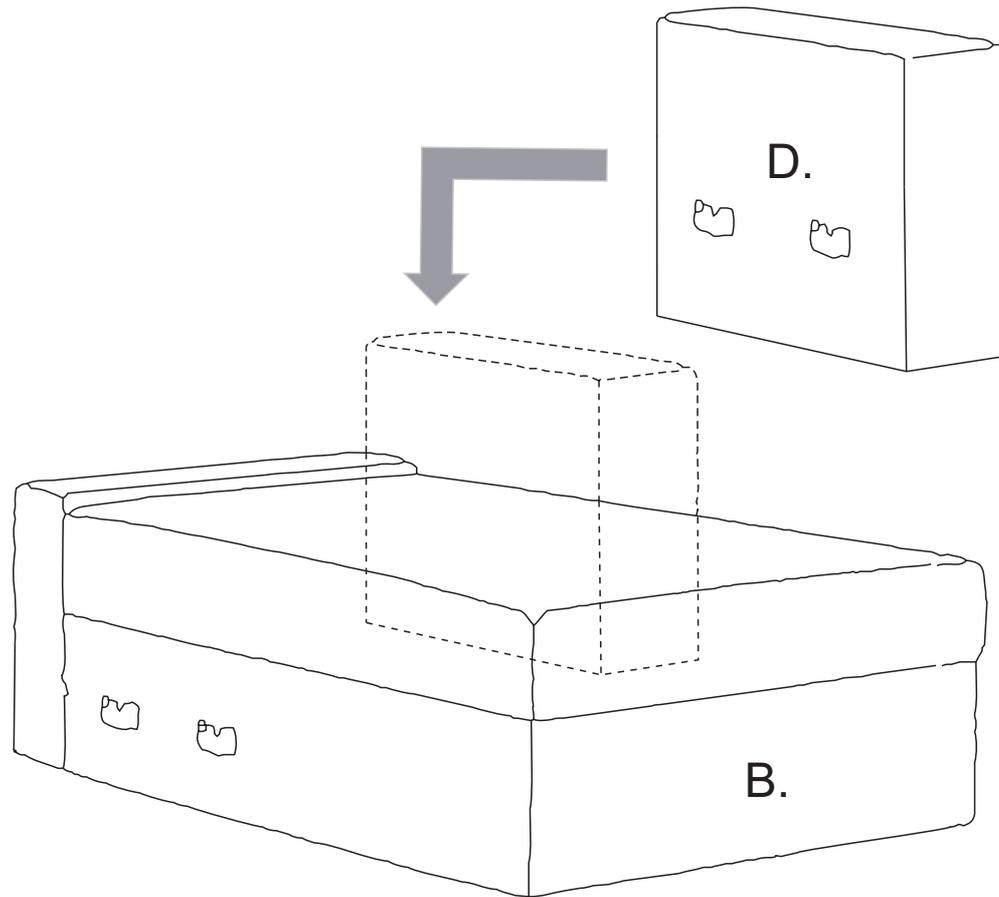


Figure 7


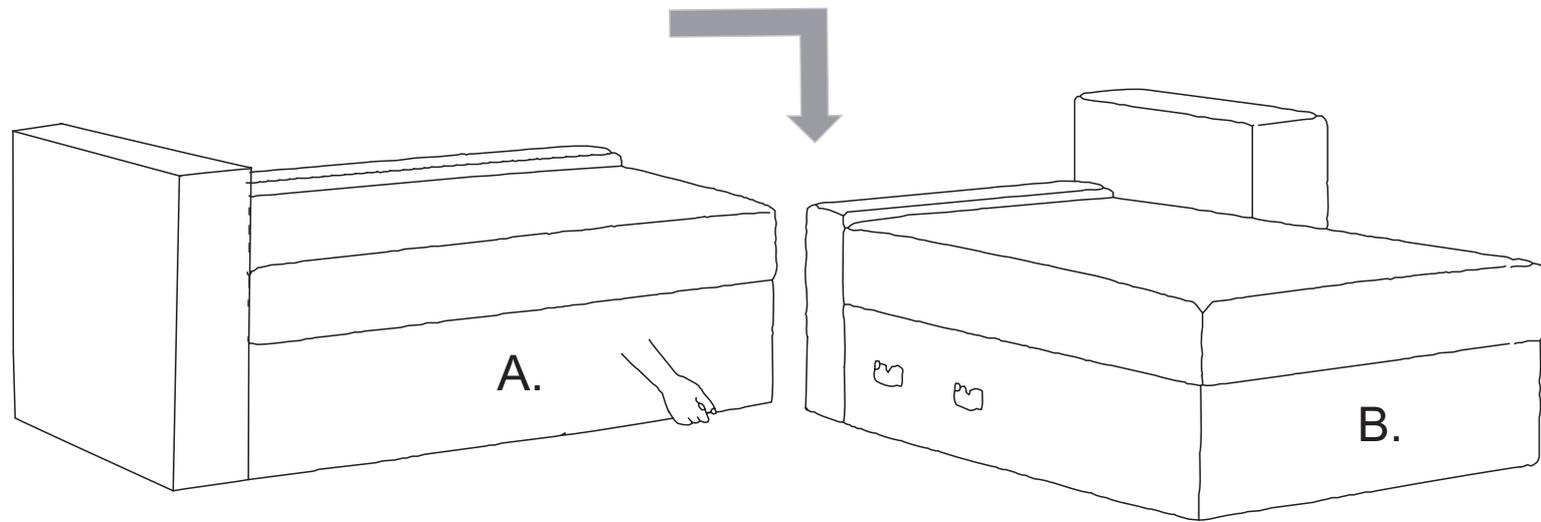


Figure 8

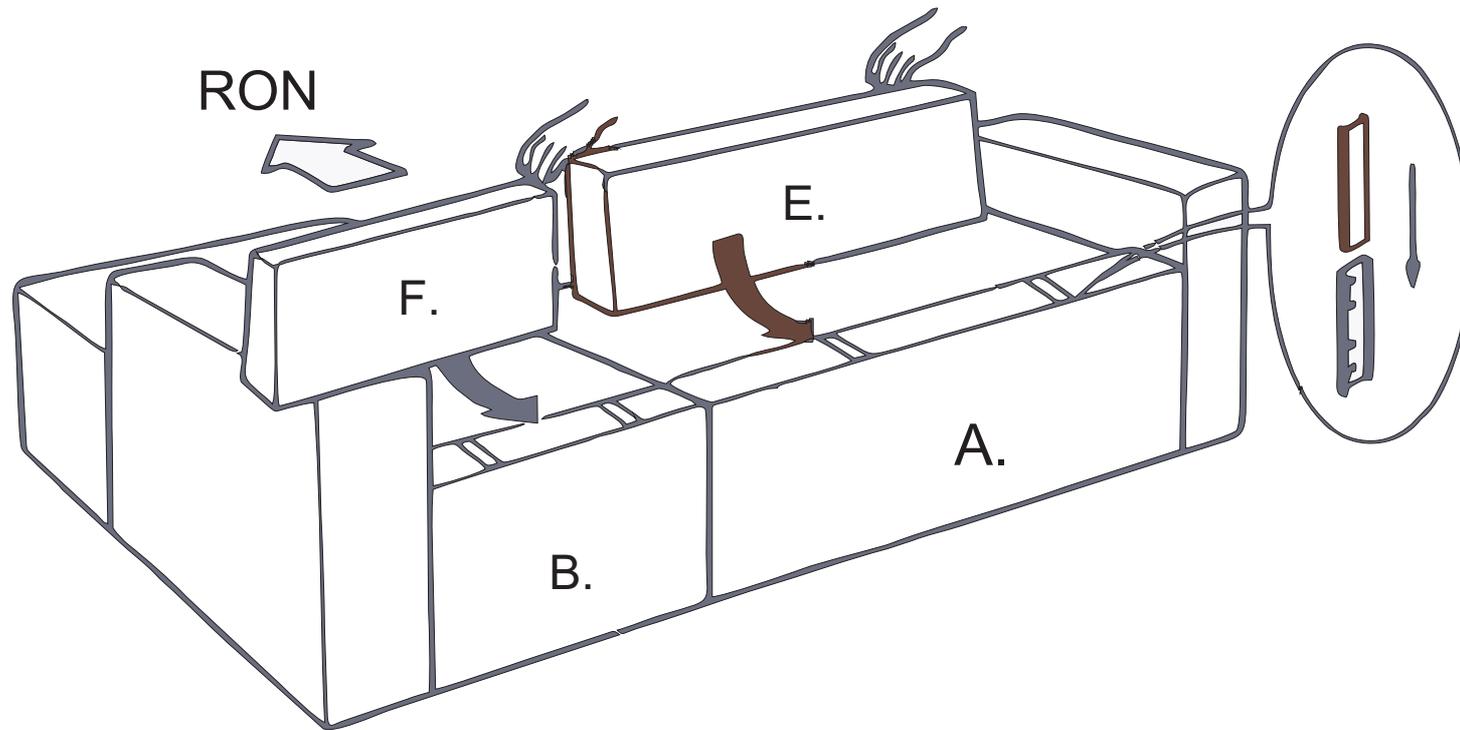

SOFA

Ensure using your unit with the backrest cushions to support backrest in sofa positions.

Figure 9


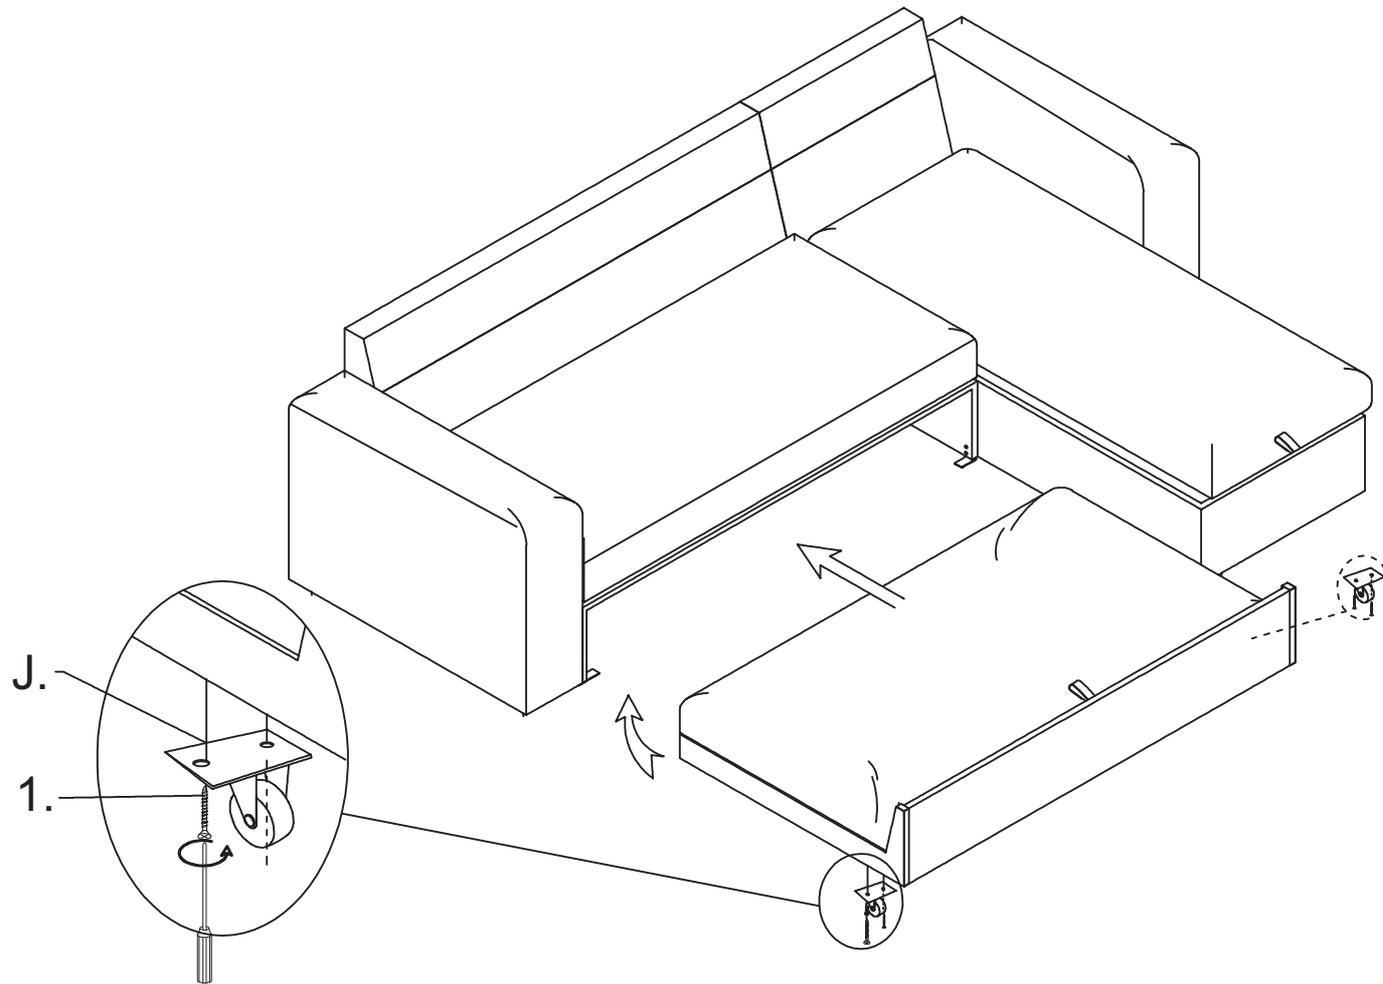




Figure 10

CONVERTING TO BED POSITON

2. Locate and carefully pull both handgrips to raise the cushion.

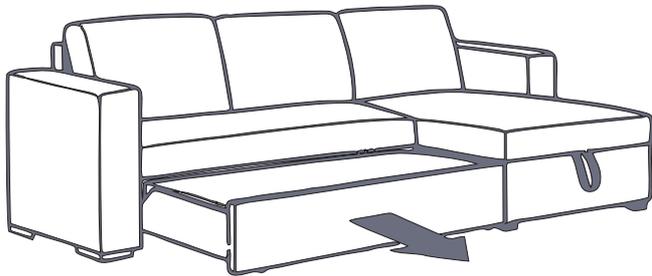

1. Carefully pull out the lower deck.

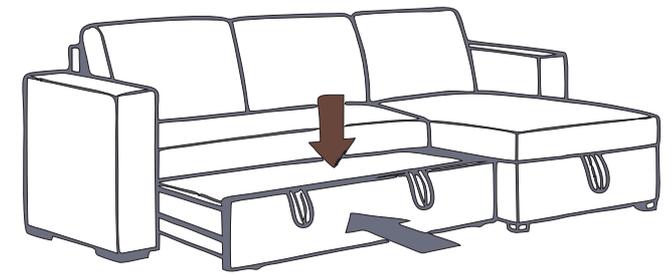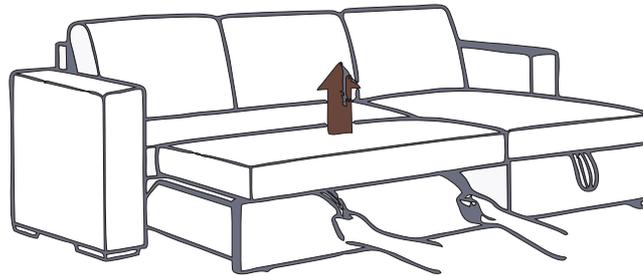

3. To restore, push cushion top downwards while simultaneously sliding the lower deck back in.