











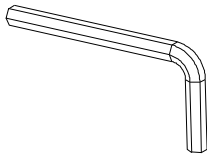


# ITEM NO. 92372 DESK

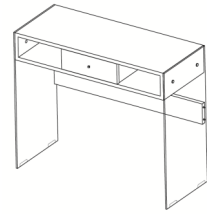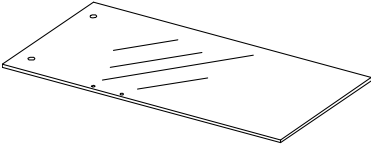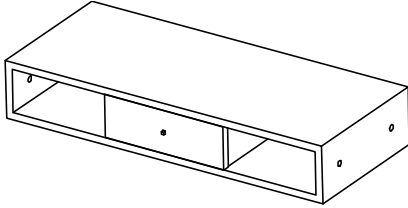


## ASSEMBLY INSTRUCTIONS

1	2	3
 <p><b>GLASS SIDE PANEL</b> 2PCS</p> <p><b>A</b></p>	 <p><b>DESK TOP</b> 1PC</p> <p><b>B</b></p>	 <p><b>BACK STRETCHER</b> 1PC</p> <p><b>C</b></p>
 <p><b>BOLT 1/4" X 1"</b> 4PCS</p> <p><b>D</b></p>	 <p><b>BIG WASHER</b> 4PCS</p> <p><b>E</b></p>	 <p><b>SLEEVE</b> 4PCS</p> <p><b>F</b></p>
 <p><b>CLEAR PLASTIC TUBE</b> 8PCS</p> <p><b>G</b></p>	 <p><b>SLEEVE</b> 4PCS</p> <p><b>H</b></p>	 <p><b>FOOT PAD</b> 4PCS</p> <p><b>I</b></p>
 <p><b>BOLT 1/4" X 2"</b> 4PCS</p>	 <p><b>SMALL WASHER</b> 4PCS</p>	 <p><b>ALLEN KEY</b> 1PC</p>

\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled. \*\*\*

## STEP 1

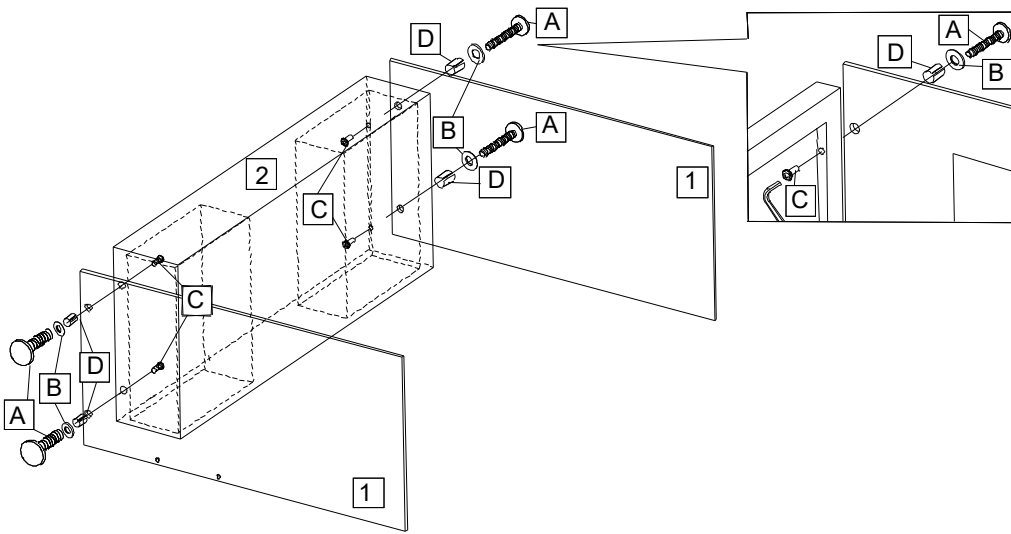


\*Please put all parts on a soft surface to prevent scratches.

Attach glass side panel (1) to desk top (2) by using bolt (A), big washer (B), clear plastic tube (D) and sleeve (C) as shown.

Please combine (A) / (B) / (D) first before assembly and make sure clear plastic tubes (D) are fixed in the holes of glass side panel (1) in assembly.

## STEP 2

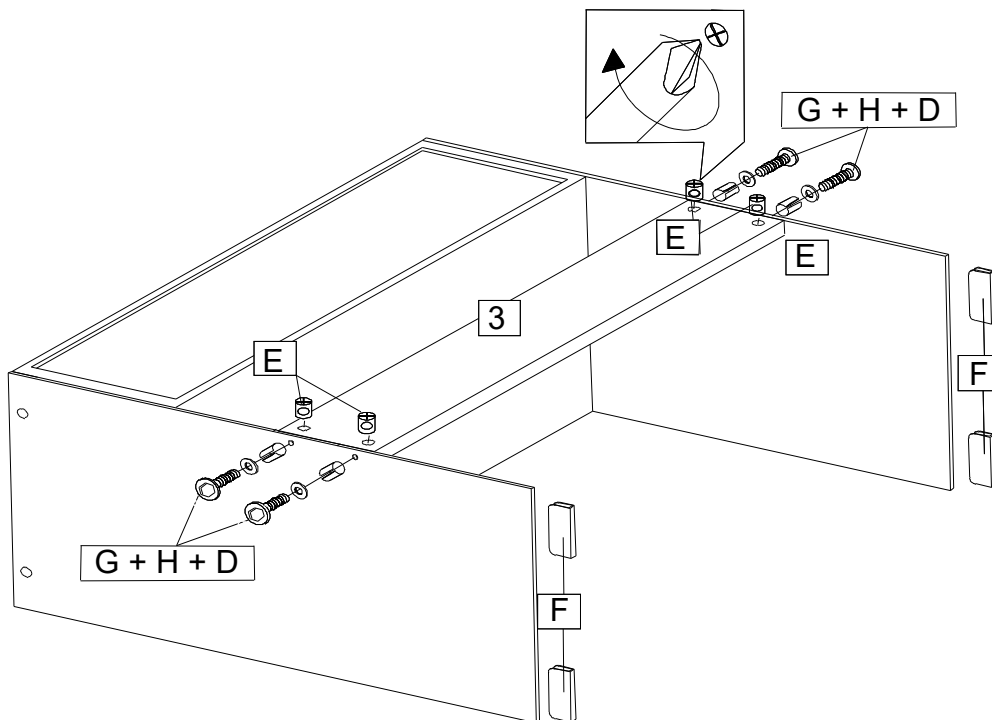

Attach back stretcher (3) to glass side panel (1) by using bolt (G), small washer (H), clear plastic tube (D) and sleeve (E) as shown.

Please combine (G) / (H) / (D) first before assembly and make sure clear plastic tube (D) is fixed in the holes of glass side panel (1) in assembly.

Then, attach foot pad (F) to the bottom of glass side panel (1) as shown.

Turn the unit right side up carefully.

Your desk is now complete.