
### **ASSEMBLY INSTRUCTION FOR ACME FURNITURE**

### MODEL#LV01000

Thank you for purchasing the quality product.Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment.Separate, identify and count all parts and metal hardware.Compare with all parts list to be sure all parts are present.if any part(s) are missing or damaged, please contact your local furniture dealer.For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\*Do not fully tighten screws until fully assembled\*\*\*

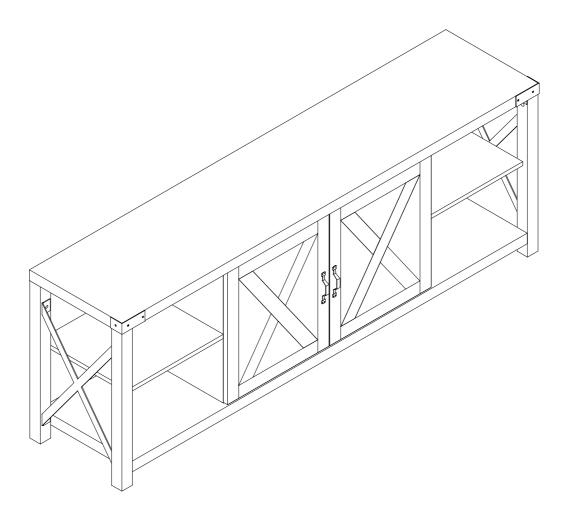


### Attention:

\*\*\*Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

## **General Assembly Guidelines**

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.




VII. Power tools should not be used to assemble this product.




VIII. Concealed hinges are three-way adjustable.

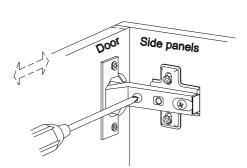

Horizontal by screw adjustment

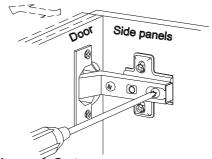

In-and-Out by loosening the hinge-arm mounting screw or via cam adjustment

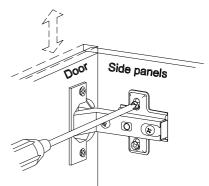

Vertical
Via slots in the mounting
plate or via cam adjustment


# **COMPONENT PARTS**


DESCRIPTION	PART NAME	QTY(PCS)	DESCRIPTION	PART NAME	QTY(PCS)
1	Table Top	1	10	Shelf	2
2	Table Bottom	1	11)	Back Panel	2
3	Legs	2	12	Door	1
4	Legs	2	13	Door	1
5	Left Side Panel	1	14)	Support Legs	3
6	Right Side Panel	1	15	Metal Tube	2
7	Middle Side Panel	1			
8	Shelf	1			
9	Shelf	1			


# Hardware List


Α		Ø8x30mm	Wooden dowel	28	pcs
В	<b>(1)</b>	Ø6x35mm	Cam bolt	22	pcs
С		Ø15x11mm	Cam lock	22	pcs
D	0		Sticker	22	pcs
Е		Ø6x70mm	Screw	6	pcs
F			Hinge	4	pcs
G		4mm	Allen Key	1	pcs
Н	D_ <b>(</b> >		Glue tube	1	pcs
I			Handle	2	pcs
J	< <u>√</u>	Ø3.5x14mm	Screw	16	pcs
K			Plastic wedge	8	pcs
L	- Summun	Ø3x18mm	Screw	8	pcs
M		Ø8x5x16mm	Shelf support pin	8	pcs
N	COLUMN (S)	Ø4x22mm	Screw	4	pcs
0	<b>1</b>	Ø1/4"x12mm	Bolt	8	pcs
Р	<b>and and and and and and and and and and </b>		Bolt	3	pcs
Q			Corner code	8	pcs
R	<b>*************************************</b>	Ø3.5x14mm	Screw	16	pcs
		Philips head screwdriver required for assembly (not included)			


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

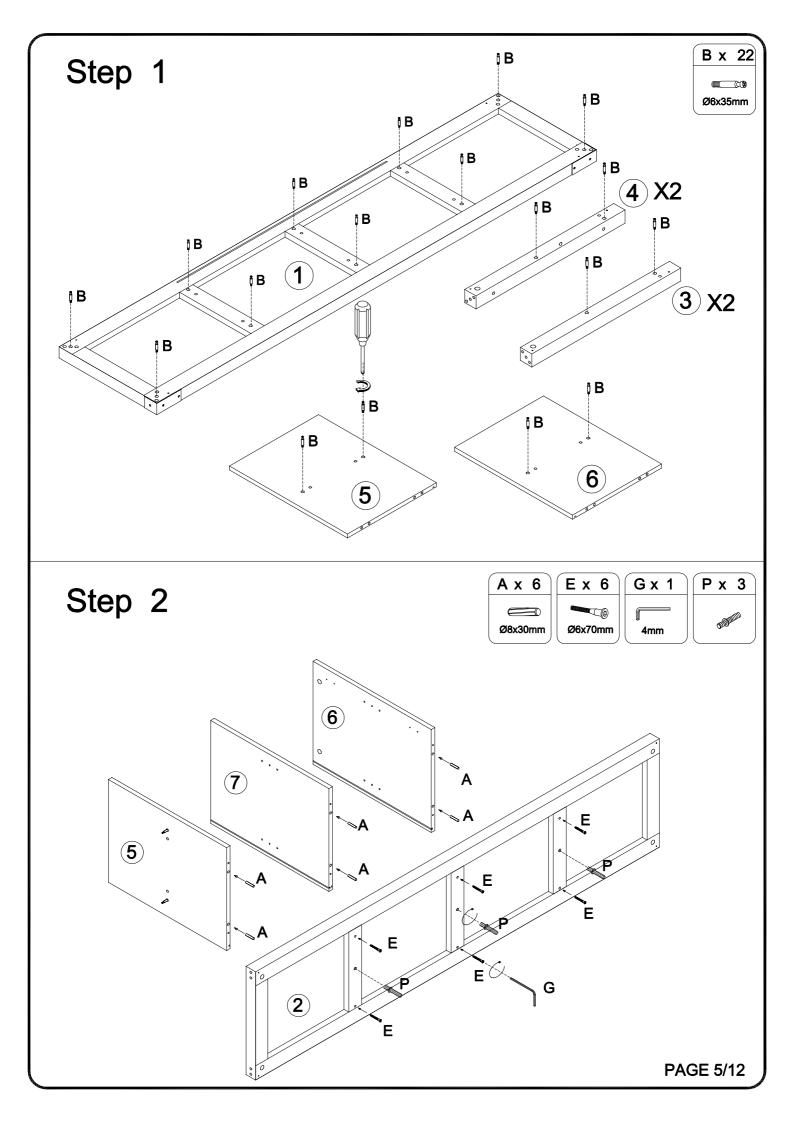


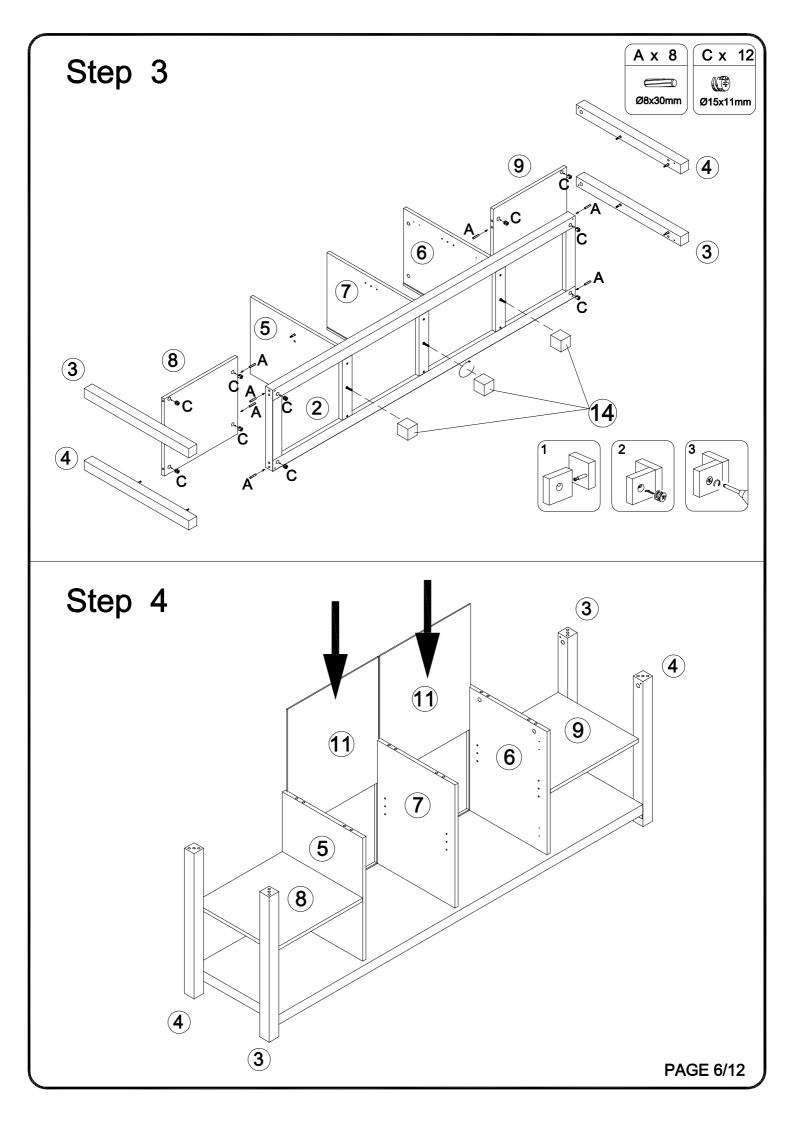


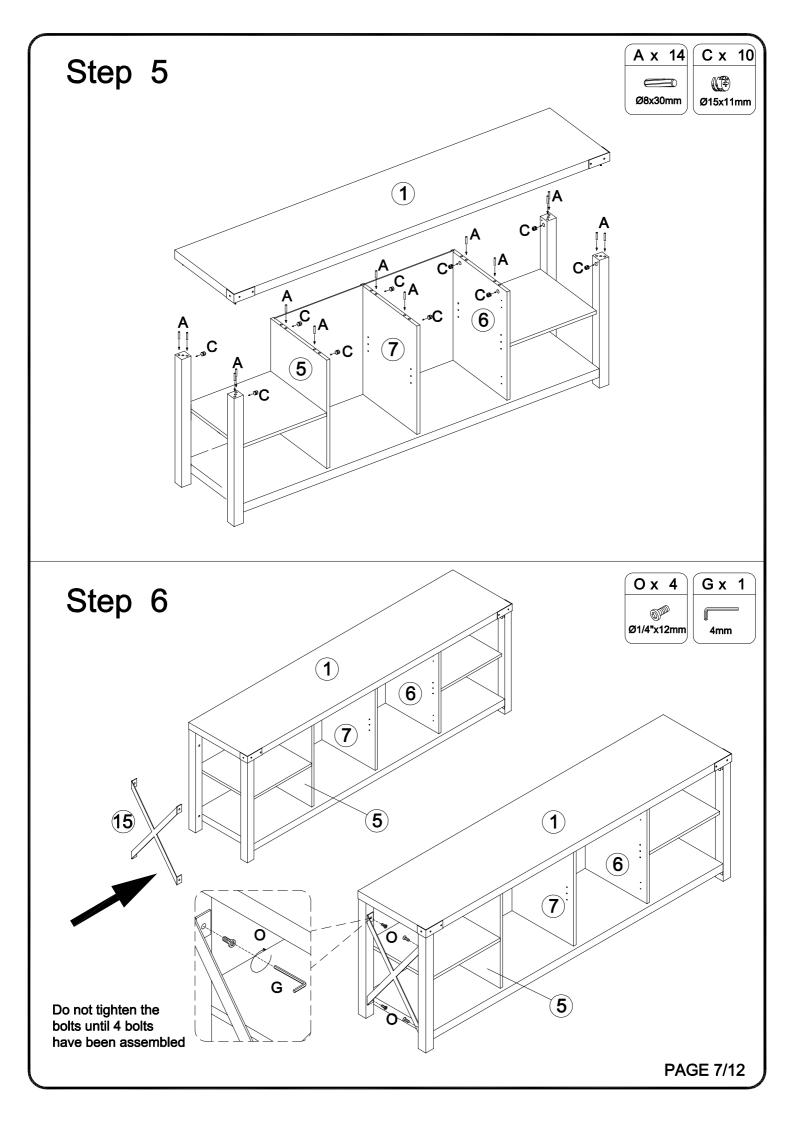

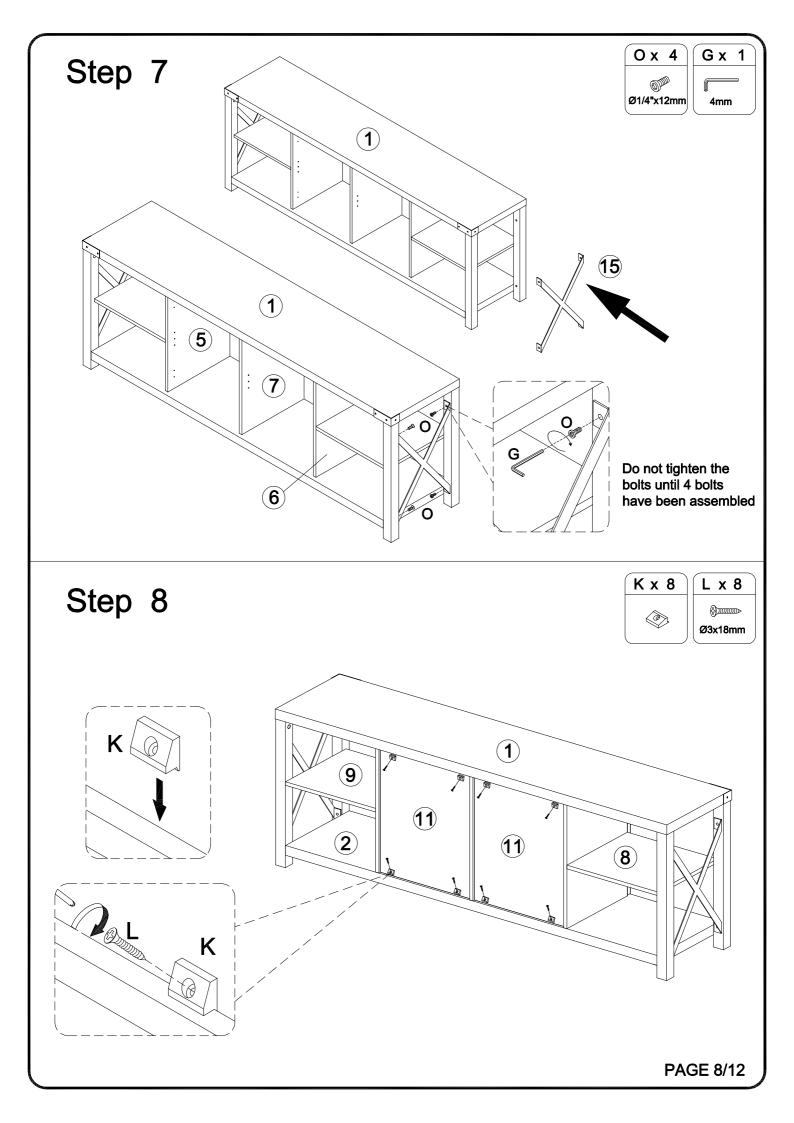

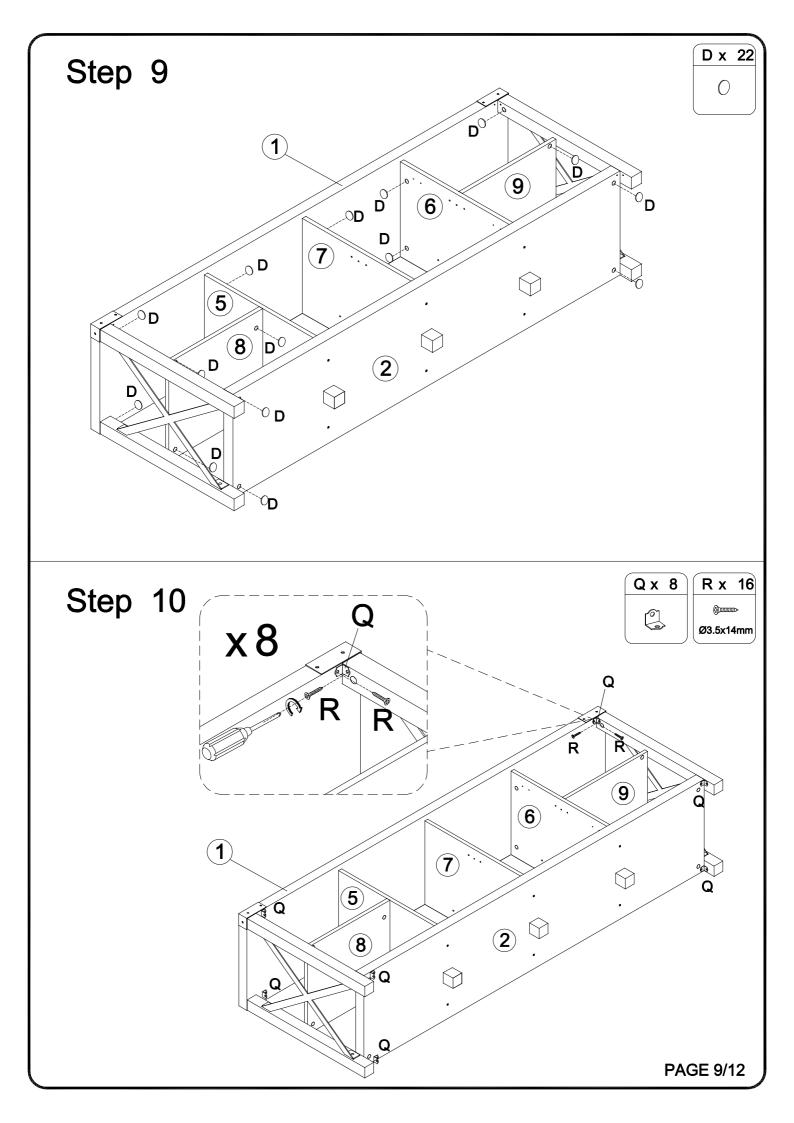

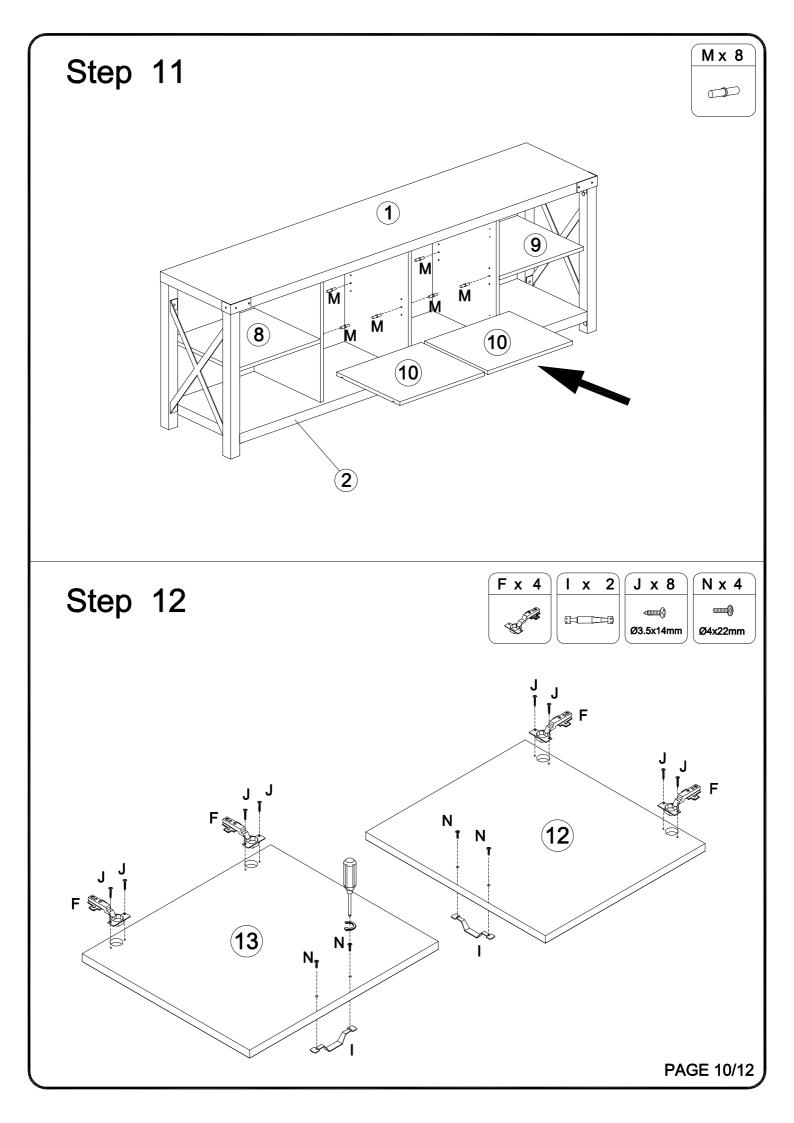

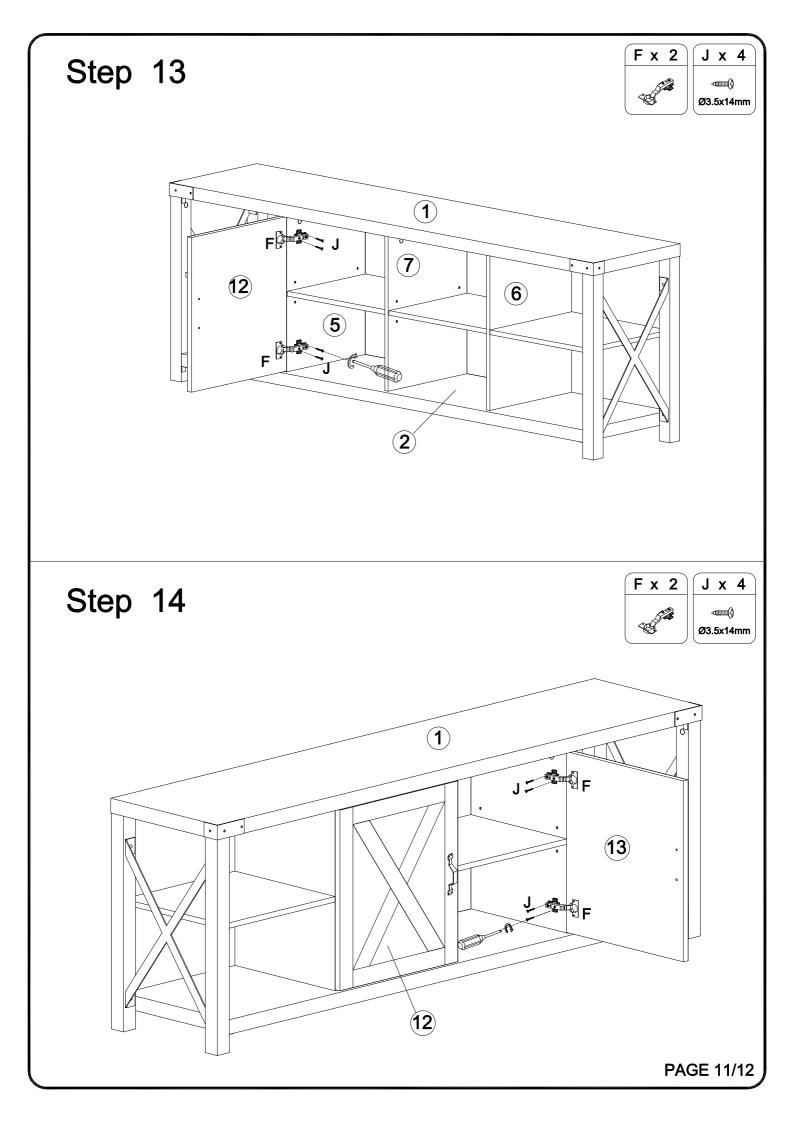

# Step 15